BASIC CONNECTIONS
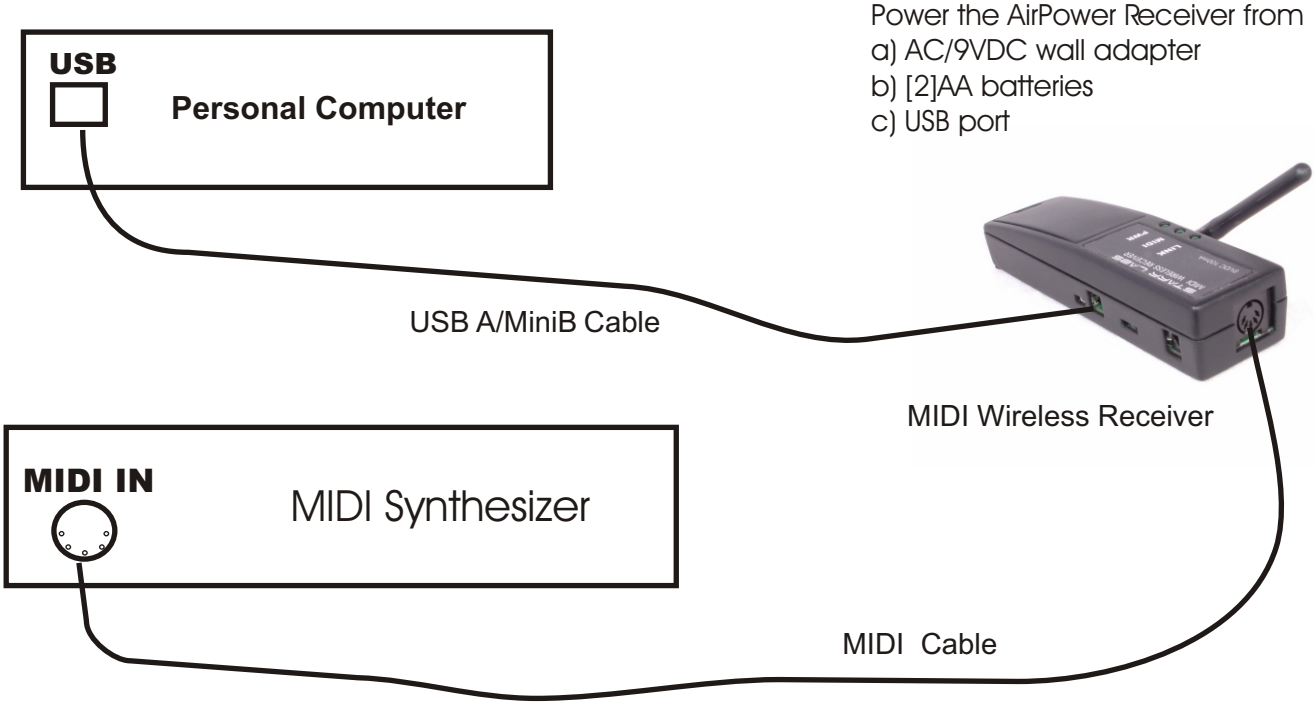
Note:
Power the AirPower Receiver from
a) AC/9VDC wall adapter
b) [2]AA batteries
c) USB port